




PERFORMANCE STEERING KIT
(#6067-00 AND #6067-01)


ASSEMBLY STEPS FOR:




1.

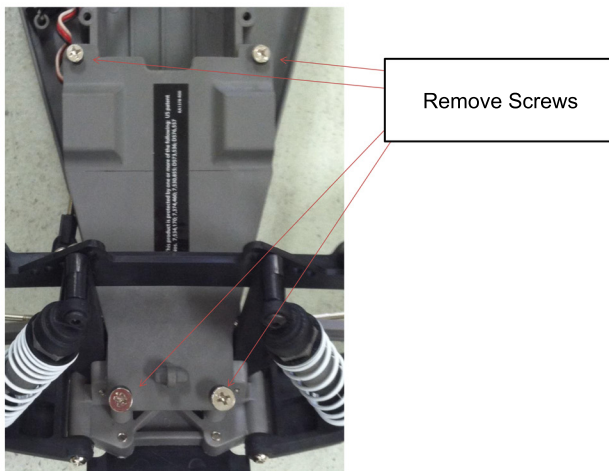


2.

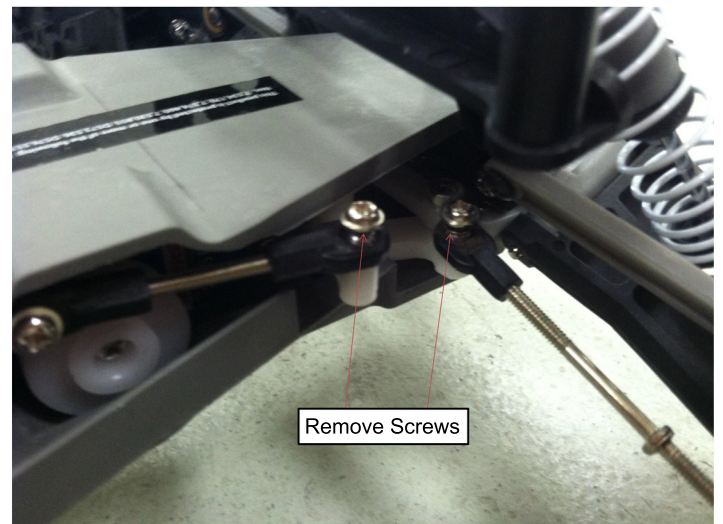

3.

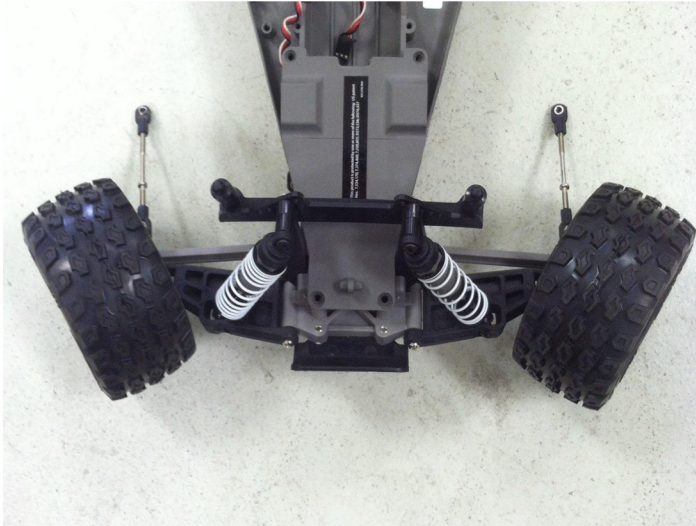

4.

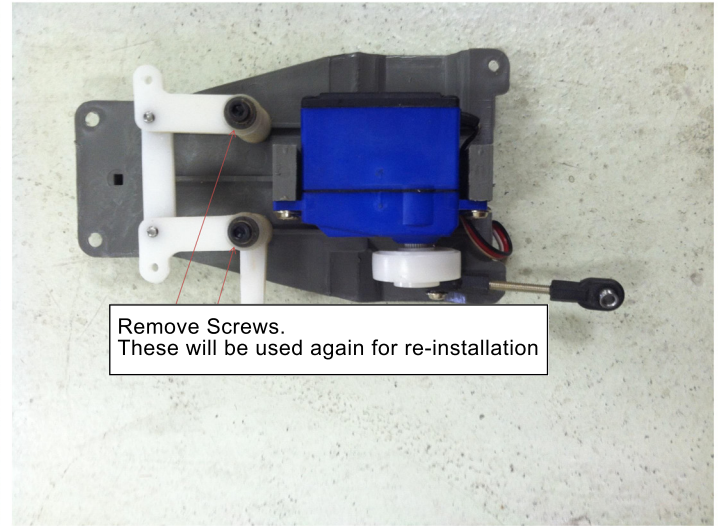

5.



6.



7.



8.




9.



10.




11.

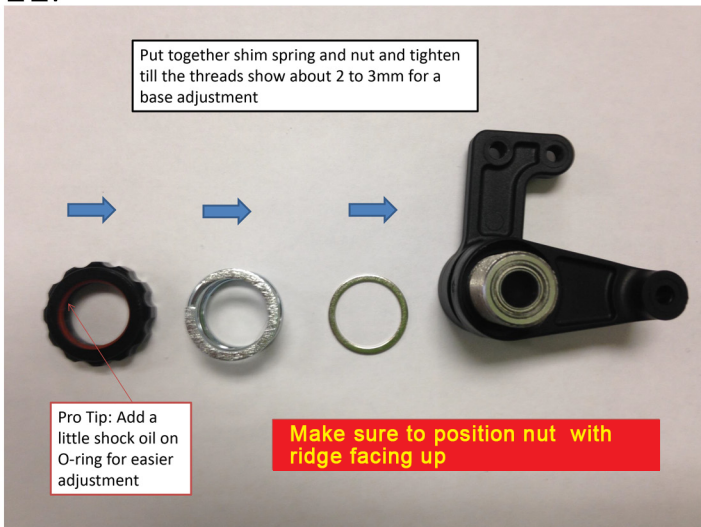

12.



13.

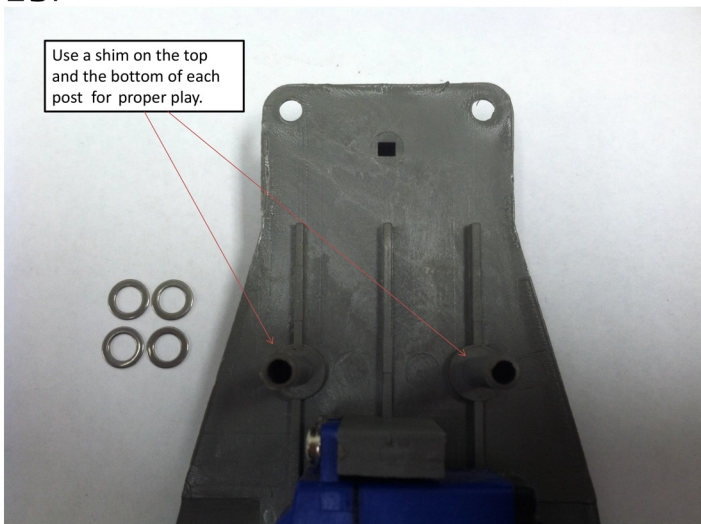

14.





IF YOU HAVE ANY MORE QUESTIONS
PLEASE FEEL FREE TO CONTACT
CUSTOMERSERVICE@PROLINERACING.COM
OR CALL US TOLL FREE: **1-800-899-RACE (7223)**