



PROTOform F1 HELMET ASSEMBLY

- 1 Slide T-Nut into cavity. Apply small amount of CA glue (not included) to the three male connectors, then attach two pieces of helmet together.

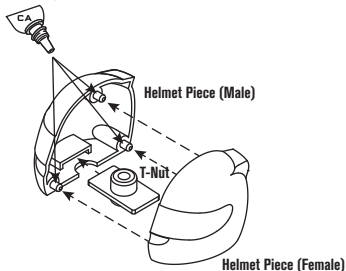


- 2 Ream hole on the dimple in cockpit of body. Fasten M3 screw through body to T-nut, placing washer in between body and screw.

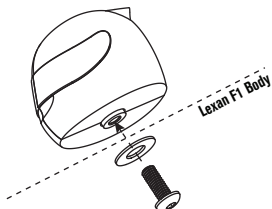

- 3 Apply helmet visor decal in color of your choice.

PROTOform FRONT BODY MOUNT (IF REQUIRED)

- 1 If wing has upright nose support, remove it.

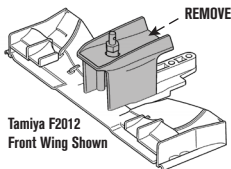

- 2 M4 Screw through wing and bulkhead*, then thread body post to exposed screw.

